




*Installing Your Milled 3/8" or 1/2" KUBOTA SVL or SSV
Windshield Using Standard Hardware:*

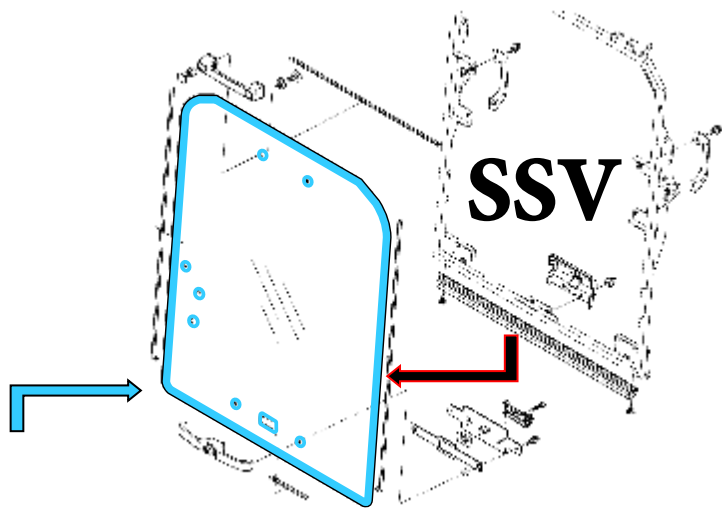

*Depth Milled Edges
to the OUTSIDE
of CAB*
*Lightly Milled/Etched
Edges to the
INSIDE of CAB*

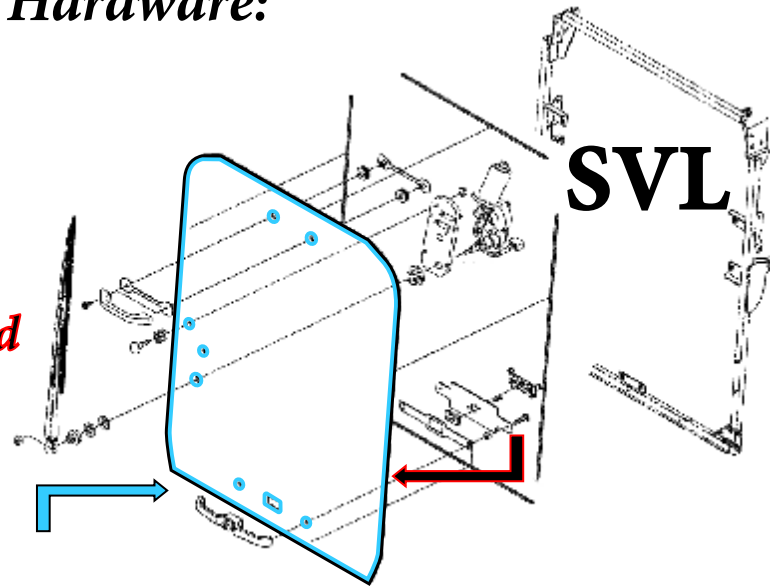

*Installing Your Milled 3/8" or 1/2" KUBOTA SVL or SSV
Windshield Using Standard Hardware:*

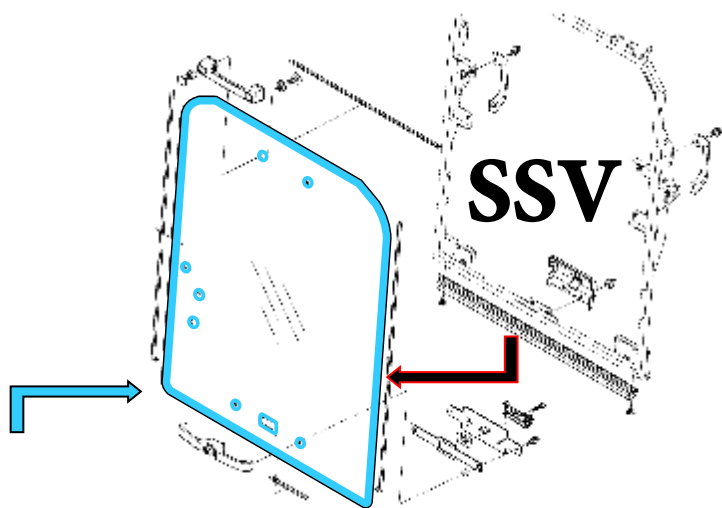

*Depth Milled Edges
to the OUTSIDE
of CAB*
*Lightly Milled/Etched
Edges to the
INSIDE of CAB*

