



WE BUILD NECESSITIES, NOT ACCESSORIES.

7050802



THE PERRY COMPANY
WWW.PERRY-CO.COM

500 S. VALLEY MILLS DRIVE

WACO, TX 76711

PHONE: 800-755-4269

INSTALLATION INSTRUCTIONS:

7050802


Coupler Guard Fits: John Deere
330G, 331G, 332G, 333G
330P, 331P, 333P, 334P, 335P

Hardware Kit:

M10 x 30mm Button Head Bolt	(3)
10mm External Tooth Washer	(3)

Components:

John Deere Coupler Guard	1
--------------------------	---

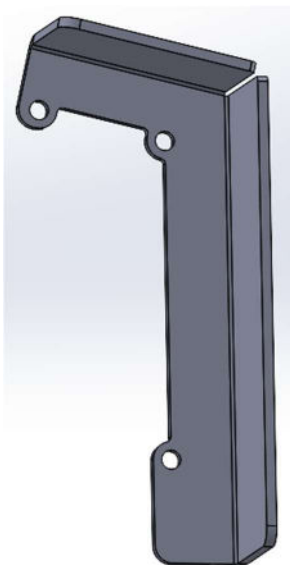

Step 1:

Hardware:

M10 x 30mm Button Head Bolt (3)
10mm External Tooth Washer (3)

Tools Needed:

13mm Socket and Ratchet
6mm Allen Wrench

Use the 13mm ratchet and socket and remove the 3 bolts located on the face of the loader arm (FIG 1). Install the coupler on top of the upper plate guard using the provided (3) M10 x 30mm Bolts and (3) 10mm external tooth washer and a 6mm Allen Wrench (FIG 2). Insert the bolts and use the 6mm Allen Wrench to tighten all the hardware. Installation is complete for the Coupler Guard (FIG 3).

