

# ARMORDILLO GUARDS

## GQTRP SVL 75-2/95/97 INSTALL GUIDE

1




4



2



5

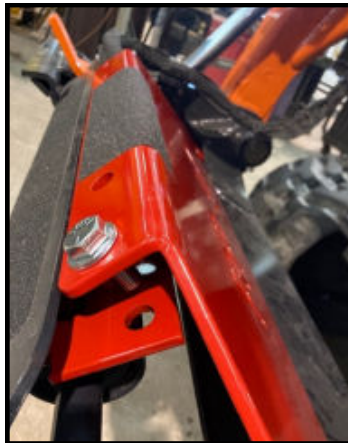

3



936.894.2060 [ARMORDILLOGUARDS.COM](http://ARMORDILLOGUARDS.COM)

# ARMORDILLO GUARDS

## GQTRP SVL 75-2/95/97 INSTALL GUIDE



- 2 Install retainer brackets shown by sliding rod portion under quick-tach frame stop gussets
- 4 Install guard as shown
- 4 Lower tas should slot between quick-tach frame and corner gussets on both sides
- 5 Install hardware as shown - (4) pieces
- 5 Ensure all hardware in placed correctly and tighten all bolts



936.894.2060 [ARMORDILLOGUARDS.COM](https://www.armordilloguards.com)