



WE BUILD NECESSITIES, NOT ACCESSORIES.

7070201

&

7070202



THE PERRY COMPANY
WWW.PERRY-CO.COM

500 S. VALLEY MILLS DRIVE
WACO, TX 76711
PHONE: 800-755-4269
FAX: 254-756-2166

Installation Instructions:
7070201 (Driver) & 7070202 (Passenger)
With Mechanical Fastening System
Replacement Windshield Fits: D1, D2, D3 & D4

Hardware Kit:

20 - M8 x 25mm Button Head Bolts
20 - M8 Nylon Locknuts
20 - 5/16" Flat Washers


Components:

1 - Handle Retainer (7070201 A)
2 - Lower Front Retainer (7070201 B)
1 - Upper Hinge Retainer (7070201 C)
1 - Lower Hinge Retainer (7070201 D)
1 - Top Retainer (7070201 E)
1 - Bottom Retainer (7070201 F)
1 - Upper Front Retainer (7070201 G)
1 - 1/2" x 1/16" Foam Tape (40")




7070201 C

15-1/2"

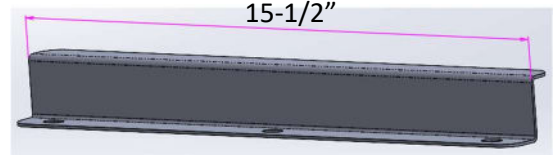


7070201 A

8"

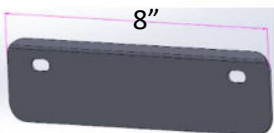


7070201 D

11"

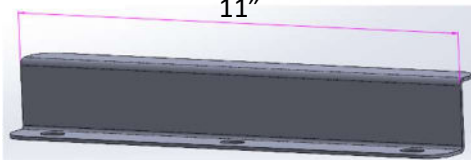

7070201 B

6-1/2"

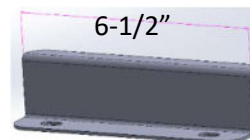

7070201 G

2"




7070201 E

12-1/2"



7070201 F

21"

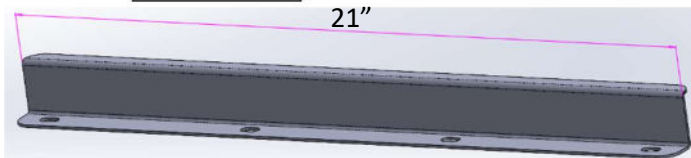



Step 1:

Hardware:
No hardware required

Tools Required:
Utility Knife (Cutting Apparatus)
13mm Wrench
T30 Torx Bit
1-1/8" Wrench or Crescent Wrench

Instructions:

Remove the Wiper Arm, Wiper Motor and Washer Tube Fitting from the glass door as shown in [FIG 1](#) and [FIG 2](#). Remove the Outside Handle as shown in [FIG 3](#). Remove the glass door from the door frame by using a utility knife or other cutting apparatus to cut away the urethane that bonds the two together as shown in [FIG 4](#). Clean the excess urethane from the door frame including the area around the wiper mounting location as shown in [FIG 5](#).

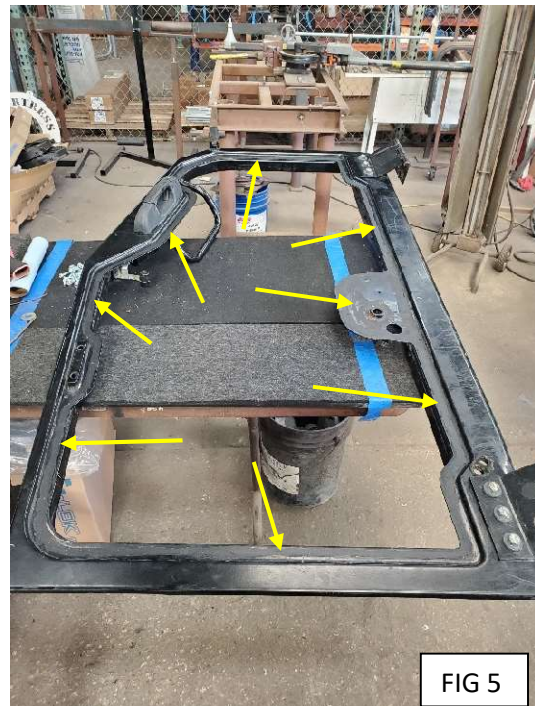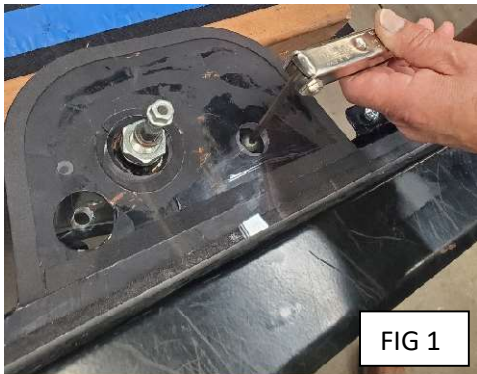

Step 2:

Hardware:
1/2" x 1/16" Foam Tape (40")

Tools Required:
Utility Knife (Cutting Apparatus)

Instructions:

Install the 1/2" x 1/16" Foam Tape onto the wiper mount location as shown in **FIG 6**. Place the polycarbonate door into the door frame pocket as shown in **FIG 7**.

*(The protective pvc coating has been removed for this example.)



Step 3:

Hardware:

M8 x 25mm Button Head Bolts (20)
M8 Nylon Locknuts (20)
5/16" Flat Washers (20)

Tools Required:

5mm Allen Wrench
13mm Wrench

Instructions:

Using (20) **M8 x 25mm Button Head Bolts**, (20) **5/16" Flat Washers** and (20) **M8 Nylon Locknuts**, install the retainers in the locations shown in **FIG 8** and **FIG 9**. ***Leave loose until all hardware has been installed.** Refer to **FIG 10** for hardware installation order. After all hardware has been installed, tighten bolts as shown in **FIG 11**.

***DO NOT OVERTIGHTEN THE HARDWARE.** Overtightening may cause the polycarbonate to crack under some instances.

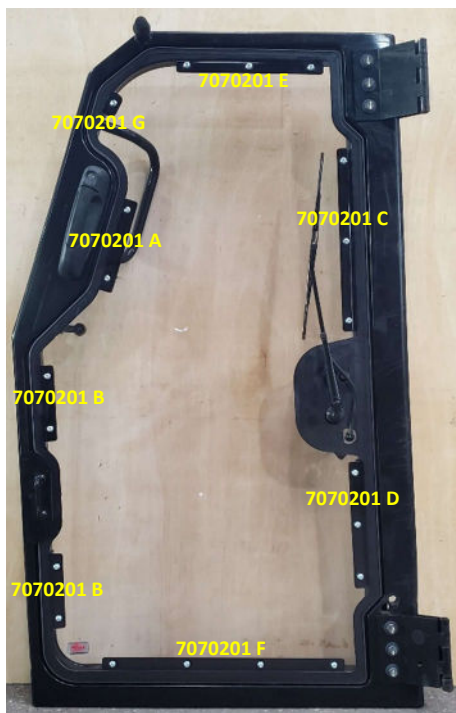


FIG 8



FIG 9

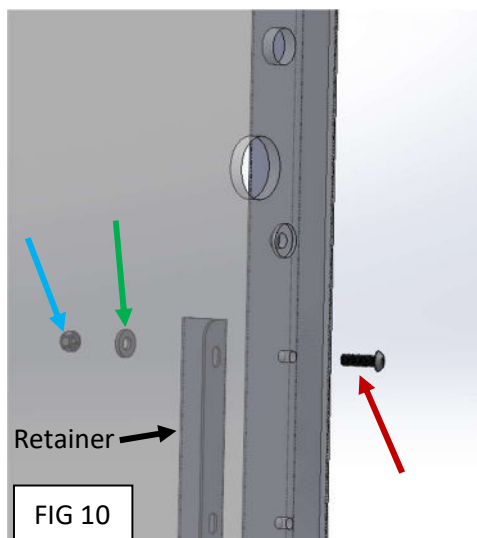


FIG 10

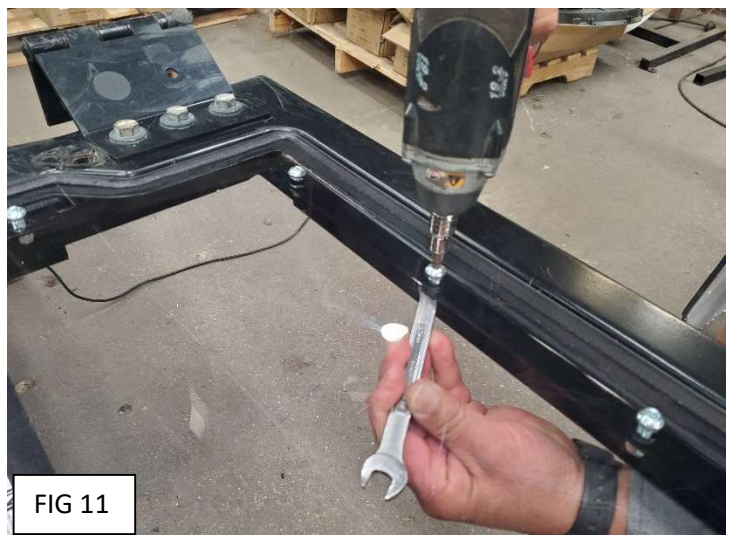


FIG 11


Step 4:

Hardware:
No hardware required

Tools Required:
13mm Wrench
T30 Torx Bit
1-1/8" Wrench or crescent Wrench

Instructions:

Re-install the Wiper Motor as shown [FIG 12](#) and [FIG 13](#). Re-install the Wiper Arm and Washer Tube Fitting as shown in [FIG 14](#). To complete the installation, re-install the Outside Handle as shown in [FIG 15](#).

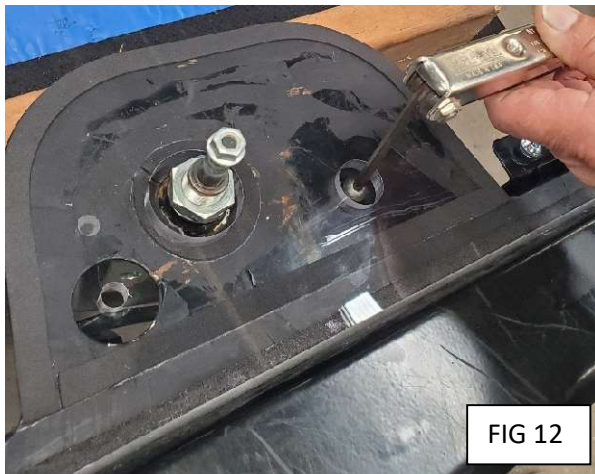

*****Only use a mixture of Dawn (or similar) dish soap and water to clean polycarbonate*****